


Central hanging plate 9 and 11

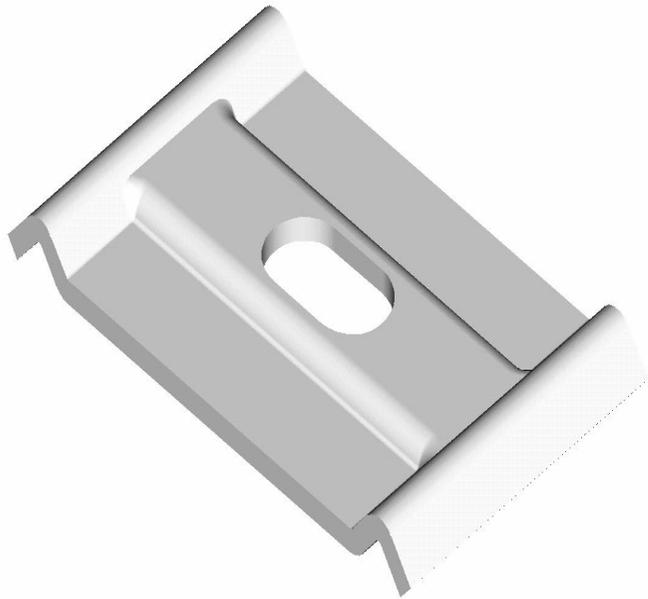

DESCRIPTION

Range of supports for ceiling mounting of [the Rejiband](#) tray using one rod, for tray widths from 100 to 200 mm, inclusive.

ADVANTAGES

Thanks to the central suspension geometry, ceiling mounting using one rod involves attachment to the tray's longitudinal rods

Ceiling mounting enables cables to be laid laterally, saves on installation time and achieves a saving in terms of material cost since installation requires only a single rod and corresponding nuts, as opposed to alternative double rod systems.

FINISHES

Electrozinc: (E.Z.) (UNE-EN 12329) for indoor installations in dry atmospheres without contaminants.

BYCRO. Electrozinc dichromate: (UNE-EN 12329).



Colour Gold. Suitable for indoor installations

Dry atmospheres without contaminants. Greater corrosion resistance.

APPLICATIONS

Recommended for ceiling mounting using 1 threaded rod provided that the width of the [Rejiband](#) tray is between 100 and 200mm.

For tray widths greater than 200 mm we recommend mounting with [Omega Mesh Channel SPLUS](#)

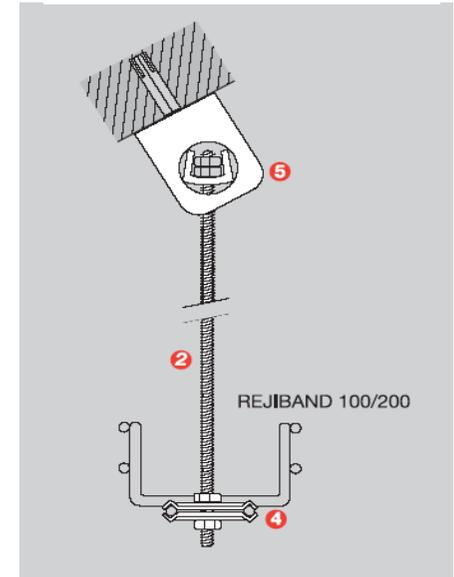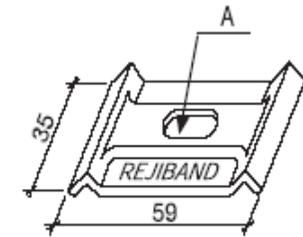

Type	A
M8	9x16
M10	11x18

RELATED PRODUCTS-----

Trays:

[Rejiband](#)

Accessories:

[Rod M10](#) – [Rod M8](#) – [Hexagonal nut M10](#) – [Hexagonal nut M8](#) – [Flat washer](#) – ...etc

Brackets:.

[Ceiling bracket](#) – [Variable ceiling Bracket](#)
[Omega Mesh Channel SPLUS](#)- ...

RELATED DOCUMENTATION

[Product Information](#)